


How to Measure

Please contact us toll free at 855-318-5022 or orders@bigbluewindow.com for a additional help.

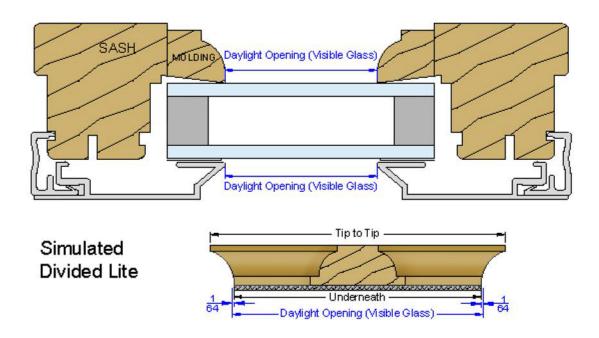

How to Measure for Simulated Divided Lite (SDL) Grilles

Measurements must be taken on the inside and the outside of the glass.

- To measure Daylight Opening (DLO), measure the visible glass, from stop to stop.
- To measure the **Tip-to-Tip** dimension, measure the longest part of the grille on the top of the profile (the portion that faces outward from the glass).
- To measure the **Underneath** dimension, measure the shortest part of the grille bar, on the bottom of the profile (the portion that touches the glass).