




Please contact us toll free at
855-318-5022 or
orders@bigbluewindow.com
for a additional help.

How to Measure

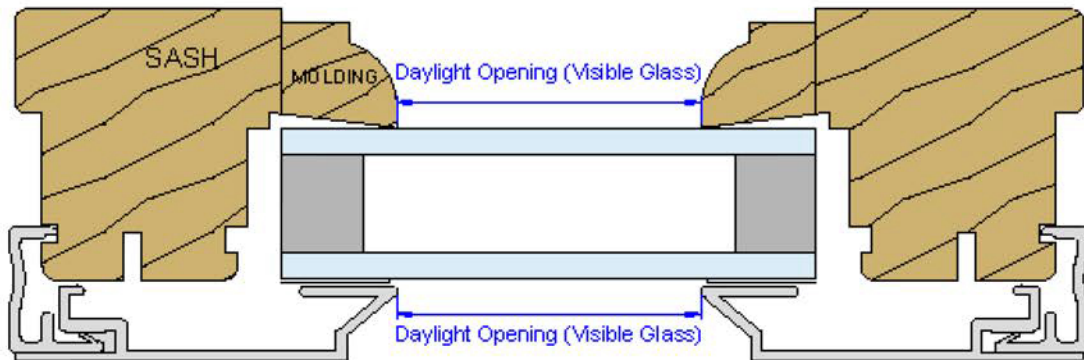

Non-Surround



How to Measure for Non-Surround Grilles

- To measure **Daylight Opening (DLO)**, measure the visible glass, from stop to stop.
- To measure the **Tip-to-Tip** dimension, measure the longest part of the grille on the top of the profile (the portion that faces outward from the glass).
- To measure the **Underneath** dimension, measure the shortest part of the grille bar, on the bottom of the profile (the portion that touches the glass).